


## LIEBHERR MK 80 DIMENSIONS

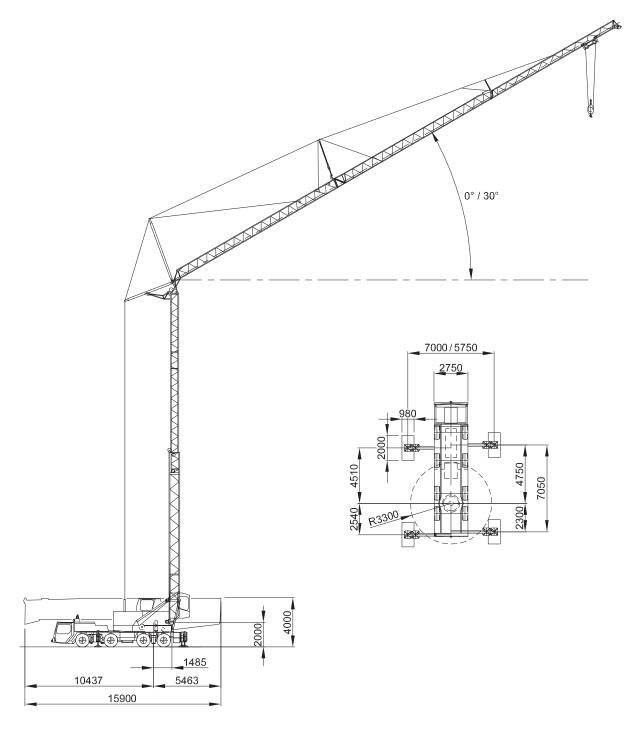


. . . . . . . . . . . . . . . . . . .

Crane dimensions are in millimeters. Radius diagram dimensions are in meters. The content in this document is mentioned for reference use only. Values may differ from current data. Always contact Mammoet for current project calculations.



# LIEBHERR MK 80 radius diagram for sw

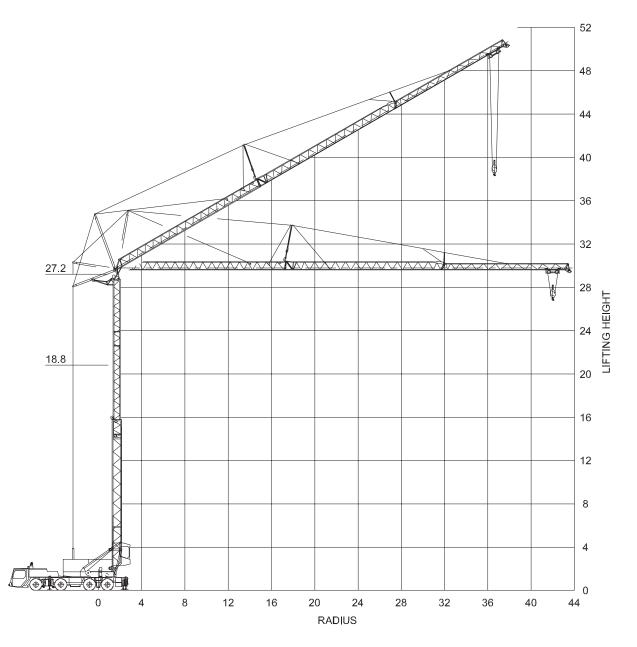

Crane dimensions are in millimeters. Radius diagram dimensions are in meters. The content in this document is mentioned for reference use only. Values may differ from current data. Always contact Mammoet for current project calculations.



### LIEBHERR MK 80 load table for sw

#### Tower crane with folding jib

• Outrigger base: 7×7 m

#### Jib offset (°) Radius (m)

	6	10	14	18	22	26.6	30.5	34	36.6	38	42
0	8	8	5.85	4.48	3.6		2.5	2.19		1.92	1.7
	8	8	6.62	5.08	4.1		2.85				
30	6	5.2	4.08	3.34	2.8	2.34	2.09	1.84	1.7		
	6	6	5.26	4.18	3.45	2.85					